MVTS-based clusters

Operator's Guide

© Mera Systems Inc.. 2004

MVTS Session Border Controller

Industry-grade cluster solution

Document №:	1
Document type:	User Guide
Document status:	Release Version 1.0.0
Date of issue:	08.09.2004
Responsible employee:	Technical writer

Copyright © 2004 Mera Systems Inc..
All rights reserved.

Mera Systems Inc. reserves the right to change any information contained in this document without prior notice.

COPYRIGHT INFORMATION

The information contained in this document is the property of Mera Systems Inc. No part of this publication may be reproduced or copied in any form or by any means - graphic, electronic or mechanical including photocopying, recording, taping, or any other information storage and retrieval system - without written consent of Mera Systems Inc. No third party, organization or individual, is authorized to grant such permission.

History of changes

Date	Version	Author and description of changes
07/07/2004	Draft	Technical writer. Created on the basis of developer's notes. Subject to overview and revision by the development team.
08/09/2004	Release	Technical writer. Modified after review by developers. 1. Description of the min_asr, min_acd parameters changed 2. Description of trust relationship between systems changed (security warning added) 3. Recommendations for single-server-cluster transition added 4. SIP-HIT mention introduced
29/06/2005	Release	Technical writer. Modified the description of the stabdby redundancy scenario after developers' recommendations
06.08.2005	Release	azharkov: chapter "Document structure", modified Hyperlinks to the table of references, inserted Index, removed List of tables, List of pictures, Table of references, added

Contents

1 INTRODUCTION 8

1.1 DOCUMENT PROFILE 8
1.2 AUDIENCE 8
1.3 NOTATIONAL CONVENTIONS 8
1.4 DOCUMENT STRUCTURE 8

2 OVERVIEW 10

2.1 GENERAL CONSIDERATIONS 10
2.2 WHAT IT TAKES TO SET UP AN MVTS-BASED CLUSTER 10
2.3 HARDWARE REQUIREMENTS 12

3 CLUSTER CONSTITUENTS 13

3.1 LOAD BALANCER (LB) 13
3.1.1 Configuration 13
3.1.2 lb.cfg configuration file 13
3.2 SIGNALING MVTS 14
3.3 MEDIA MVTS 16

4 STANDBY REDUNDANCY 18

4.1 REDUNDANCY IDEOLOGY 18
4.2 TRUST RELATIONSHIP BETWEEN PRIMARY AND STANDBY SYSTEMS 18

APPENDIX 1: WHAT'S IN A TWO-LEVEL CLUSTER PACKAGE 20

APPENDIX 2: MISCELLANEOUS OPERATIONAL ISSUES 21

SMOOTH TRANSITION FROM SINGLE-SERVER TO CLUSTER SOLUTION 21
HOW THE SIP-HIT TRANSCODER FITS IN THE CLUSTER MVTS 21

List of Tables

Table 1 Typographic conventions used in the document..... 8
Table 2 Media MVTS hardware requirements 12

List of Figures

Figure 1 Two-level MVTS cluster 11
Figure 2 Three-level MVTS-based cluster solution 11

Table of References

Reference	Name of the document
[1]	“MVTS 3.1.0 User Manual”
[2]	“MVTS_Configuration”
[3]	“SIP-HIT system administrator guide”

1 INTRODUCTION

1.1 DOCUMENT PROFILE

This document is a working manual covering the peculiarities of the architecture, installation and operation of clustered versions of the MVTS session border controller produced by MERA Systems Inc.

1.2 AUDIENCE

This guide is intended for System Administrators whose responsibility is to install, configure and operate the MERA VoIP Transit Softswitch (MVTS.) Users of this document are required to have an intimate knowledge of UNIX-like operating systems (Free BSD, Red Hat Linux) and working knowledge of the MVTS session border controller [1].

1.3 NOTATIONAL CONVENTIONS

The conventions used in this document are described in Table 1 below.

Table 1 Typographic conventions used in the document

Example	Convention
Note: *text*	Important information requiring special attention
[N]	Reference to some other document
`void`	Examples of source code, program output, logs, configuration files etc.
Ulimit	Names of programs or files
`call_radix=`	Courrier New, 11 pt is used to highlight names of parameters of configuration files and their sections

1.4 DOCUMENT STRUCTURE

Here is a brief synopsis of the chapters and appendixes in this document:

Chapter 1: **Introduction** describes the purpose and the structure of this document.

Chapter2: **Overview** gives coverage of the product clustered version, its purpose, considerations that might compel you to contemplate upgrading your switching capacity. In addition, the chapter provides general information about the hardware specifics of the product's clustered version.

Chapter 3: **Cluster constituents** leads you through the particulars of clustering the MVTS solution and explains operation and general

configuration of the system. Disregard section 3.1 if you operate a two-level cluster facility.

Chapter 4: **Cluster redundancy** describes a method of setting up a standby server in support of your live-traffic system. The principles and algorithm of backing up the cluster version of the softswitch are entirely different from the way this is done for stand-alone platforms.

2 OVERVIEW

2.1 GENERAL CONSIDERATIONS

Being a cost-effective solution the MVTS session border controller (SBC) installed on a platform whose computing power does not differ much from an average table-top system can handle but a limited number of simultaneous calls. As the carrier's business grows the increased volume of traffic may require additional investment in the switching facility. To protect your initial investment in the switching capability and cope up with the scalability challenge the MVTS SBC is made clusterable.

2.2 WHAT IT TAKES TO SET UP AN MVTS-BASED CLUSTER

Operation in a heavy traffic environment necessitates division of the major system functions (gatekeeper, RADIUS, signaling proxy, media proxy etc.).

The roles of constituent MVTS systems within a cluster element change. The most resource-intensive process in terms of computing power is full proxy (signaling and media) operation. Therefore, pumping media traffic becomes the sole function of the computer which we call in what follows Media MVTS (MMVTS). At the same time all the gatekeeper, routing, billing and RADIUS procedures are now the job of the system referred to in this document as signaling MVTS (SMVTS). Since signaling, routing, billing and all associated tasks are less demanding from the standpoint of computing power one SMVTS can control several MMVTSs (reliably manageable fleet is three full proxies of 1500-2000 simultaneous calls capacity).

Therefore a basic functional cluster element comprises two parts:

- signaling MVTS (SMVTS) in control of
- three media MVTSs (MMVTS)

A block diagram of a cluster element is demonstrated in Figure 1 below

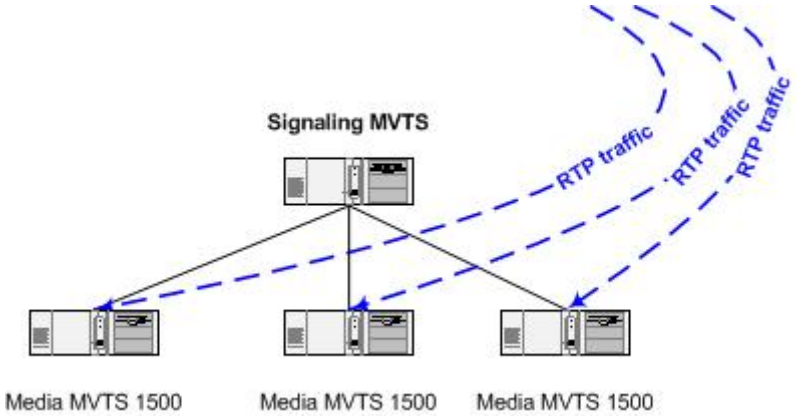


Figure 1 Two-level MVTS cluster

Since the number of media MVTSs in the two-level cluster hierarchy is small the signaling MVTS is designed to evenly distribute traffic between the media systems. Such four-component layout (an SMVTS in control of three media systems) provides a cluster element that can serve as a building block for large-scale switching facilities.

As a single signaling MERA can cope up with maximum three 1500 capacity MMVTSs, a growth in the population of media servers requires more signaling MERAs, and proliferation of signaling MVTSs entails introduction of dispatch control of some kind and changes in the intellect of the signaling MVTS which is now designed to work under the control of a Load Balancer (LB).

Deployment of the Load Balancer to manage operational efficiency of the signaling MVTSs provides a three-level cluster version of the MVTS-based switching facility. With the only function of “giving orders” a single LB can control as many as 4-5 signaling MERAs.

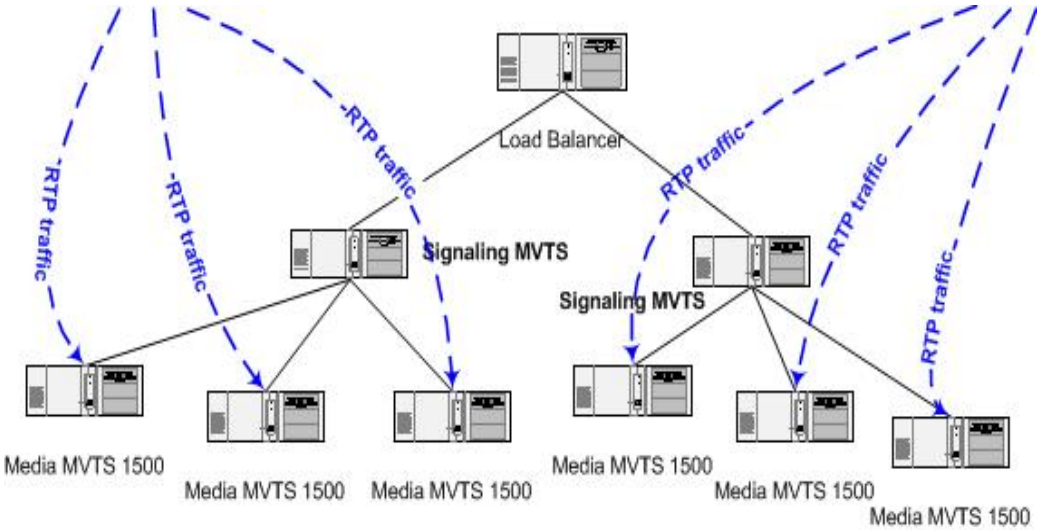


Figure 2 Three-level MVTS-based cluster solution

In the three-level cluster facility the gatekeeper registrations are balanced by the LB as the rest of the transit traffic.

2.3 HARDWARE REQUIREMENTS

In the estimation of hardware requirements for clustered MVTS facilities we proceeded from the assumption that the MMVTS is the most demanding element of the system in terms of computing power.

Table 2 Media MVTS hardware requirements

MMVTS Performance	Hardware specifications
2000 concurrent calls	Dual Xeon Pentium IV 2.8GHz/2048Mb RAM/1 or 2Gb Ethernet ports

The same hardware configuration allows 6000 calls performance of the signaling MVTS and 15’000 – 18’000 concurent calls performance of the LB.

3 CLUSTER CONSTITUENTS

3.1 LOAD BALANCER (LB)

The main task of the Load Balancer (LB) is even distribution of signaling traffic among signaling MVTSs. The LB periodically (in 5 sec time) inquires all of the controlled signaling MVTSs to assess their current traffic load. Based on these data the LB sorts signaling MERAs by their traffic load and the least busy one always becomes the first in line for additional portion of traffic. The query mechanism allows the use of several LBs at the same time.

3.1.1 CONFIGURATION

LB's configuration is determined by two configuration files.

lb.cfg is the main configuration file describing the LB's functional parameters.

pool.cfg specifies the signaling MERAs managed by the load balancer.

3.1.2 LB.CFG CONFIGURATION FILE

The **lb.cfg** configuration file comprises the following sections of configuration parameters:

Section [Administration] incorporates the configuration parameters:

`mvtspool_cfg=` specifies the name of the file with the description of the controlled signaling MERAs (**pool.cfg** by default);

`mail_alert=` defines an email address for LB malfunctioning alerts;

`waiter_threads=` defines the number of signaling traffic processing threads (1 by default).

Section [Console]

`admin_gid=` sets the number of the user group to which the user accessing the LB through CLI must belong.

`console_port=` specifies the number of a port through which the LB interacts with the console.

Section [H323]

`local_address=` specifies a local address for packets sent to a signaling MERA (same as in the MVTS);

`port=` is listening port for signaling traffic (by default 1720);

`alternate_port=` is alternate listening port for signaling traffic (by default value not defined).

Section [SNMP]

The configuration parameters of this section are identical to those found in the [SNMP] section of a regular MVTS:

```
local_port=
contact_info=
system_name=
system_location=
community=
trap_community=
trap_address=
trap_port=
trap_level=
trusted_address=
trap_enable=
snmp_enable=
trap_email=
trap_email_cmd=
trap_email_subject=
trap_email_from=
trap_email_period=
```

3.2 SIGNALING MVTS

Operating a signaling MERA in a two-level cluster facility does not differ much from operating a common MVTS session controller with one minor exception – the signaling MERA runs as a **signaling proxy only** regardless of the settings that affect this operating mode.

To terminate calls specify the media MVTS as an H323-to-H323 converter (field `converter=` in the [H323] section of the **meraproxy.cfg** file) for outbound calls only.

Example:

```
converter=media1/IP-address/port/2/1
```

Naturally, in the routing plan of the terminating gateway you will have to define via what converter (i.e. media MVTS) calls will be terminated.

The configuration files of the signaling MVTS in a two-level cluster facility differ from those of a stand-alone MVTS in one section only. The section name is [Media]; it is included into **meraproxy.cfg** and features the following configuration settings:

[Media]

```
address=
min_asr=
min_acd=
call_radix=
suspend_time=
no_connect_suspend_time=
mode=
```

`address=` serves to specify the IP address and port of the media server. You can specify several address:port pairs on a line delimiting them by semicolons. For example:

```
address/port=193.121.78.55:1720;193.121.78.58:1720
```

if you omit a port number the default port is 1720.

`min_asr=` is the minimum acceptable ASR setting (see also field `min_asr=` in [2]). Dropping below the defined `min_asr=` value will suspend the media MVTS in question for the period set in `suspend_time=`. Valid values are integers in the 0 – 100 range.

Example:

```
min_asr=50
```

`min_acd=` sets the minimum acceptable ACD (Average Call Duration). Dropping below the `min_acd=` value will suspend the media MVTS for the period set in `suspend_time=`. Valid values are positive integers from 0 through 10000 (average call duration in seconds.)

Example:

```
min_acd=60
```

`call_radix=` serves to define the base (i.e number of calls) for ACD and ASR calculations (see also descrition of the `call_radix` parameter in [2].)

Example:

```
call_radix=300
```

`suspend_time=` sets the time (in seconds) for which the low-ACD or low ASR media server becomes suspended. Valid values are positive integers in the 0 to 86399 range (86399 seconds = 24 hours). The default value is 0.

Example:

```
suspend_time=600
```

`no_connect_suspend_time=` serves to set for how long the media server will stay suspended in the absence of a TCP connect (seconds). Valid values are positive integers in the 0 to 86399 range (86399 seconds = 24 hours). Example:

```
no_connect_suspend_time=300
```

`mode=` serves to control the system operating mode when media servers become inaccessible. Valid settings are 1 and 0.

`1` means terminate calls with the target terminating entity when no media server is accessible

`0` means terminate calls with the local error code eNoMediaServer=400 when no media server is accessible

Example:

```
mode=0
```

The SMVTS distributes calls between the media servers based on the actual MMVTS traffic load reestimated every second.

3.3 MEDIA MVTS

The media MVTS (MMVTS) is intended for full proxying calls only.

The functionality of the media MVTS has been reduced to indispensable austerity that would allow a pass-through for signaling traffic and media proxying. The media MVTS is devoid of the following capabilities:

- interoperation with a remote gatekeeper;

- gatekeeper functionality

- interaction with RADIUS servers

- call statistics

- definition of routing rules

With the only task of media proxying the MMVTS has but one configuration file **meraproxy.cfg**.

The media MVTS extracts call termination addresses from Setups supplied by the signaling MERA. The `signalling_proxy_address=` parameter is the only configuration setting that distinguishes the [Administration] section of the **meraproxy.cfg** file of the media MVTS. This parameter serves to enter a list of addresses from which the media MVTS accepts calls. Use the semicolon character to delimit the list items.

Consider an example of the **meraproxy.cfg** file for a media MVTS below:

[Administration]

```
mail_alert=aaa@yahoo.com # this is email
local_address=*
rtp_threads=1
call_threads=1
public_access=0
signalling_proxy_address=192.121.1.1;192.121.1.2
```

[Console]

```
console_port=1730
admin_gid=0
billing_gid=0
support_gid=0
```

[H323]

```
port=1720
```

[Debug]

```
trace_level=3
level=3
no_empty=1
period=1:00:00
file=../debug/logs/
max_size=3000000
max_lifetime=100
max_file_size=200000
```

[Proxy]

```
local_address=*
```

4 STANDBY REDUNDANCY

4.1 REDUNDANCY IDEOLOGY

The redundancy of the system is accomplished by deployment of a standby control element (LB or SMVTS) that runs as a failover server ready to take over from the primary system at any moment.

To ensure a smooth takeover from the primary system, should the latter fail, the standby system must be configured exactly as the primary platform. The takeover and failback scenario for the primary and failover systems is organized in the following way.

Let us assume the primary server has three network interface cards and operates three IP addresses A1, A2, and A3 to handle (i.e. send and receive) traffic. The standby server must have the same quantity of NICs so that the operation addresses are equally accessible both on the primary host and on the failover system. At every single instance of the system operation, the addresses are up and active on one server only.

During normal operation, addresses A1-A3 are active on the principal host only. At regular intervals (the period is configurable), the standby server attempts a TCP connect to all the three addresses. Failure of all connect attempts (the number of connect retries is configurable too) is the indication that the principal server is out of order. In this case, the failover server gets the same three IP addresses up on its NICs and assumes traffic.

Once the main host is up and running again, it checks the IP addresses for activity and if the addresses are dormant, the principal server starts in a normal way. If the activity check is positive, the resurrected host sends the failover server (which handles traffic) a special command directed at the active IPs. Following this command, the failover server shuts down the operating IP addresses and goes to the standby mode. This done, the principal MVTS host gets the IPs up on its NICs and accepts traffic.

All the necessary configuration parameters for implementing this redundancy layout you can find in the section [Redundancy] of the file of global system settings **meraproxy.cfg**. [2]

4.2 TRUST RELATIONSHIP BETWEEN PRIMARY AND STANDBY SYSTEMS

Trust relationship enables remote access to the standby server with the root account privileges without the need to enter the access password. Trust relationship between computers is instrumental to allow remote execution of commands over ssh and make it possible to remotely start scripts that automate important administration procedures and operation tasks.

Let us assume there are two servers named **master.com** and **backup.com**. To establish trust relationship between the computers for remote access over ssh:

Log on to the **backup.com** server using the root account and type the following commands at the console prompt:

```
# ssh-keygen -t dsa
```

This utility generates a secret and public key and writes them to the files **/root/.ssh/id_dsa** and **/root/.ssh/id_dsa.pub** respectively. During the dialogue with the **ssh-keygen** utility just press the 'Enter' key in response to all the questions of the application (while responding to the message "Enter passphrase (empty for no passphrase)" do not enter anything, just press the 'Enter' key).

```
# scp /root/.ssh/id_dsa.pub root@master.com:/root/.ssh/authorized_keys2
```

The **scp** utility will copy the **id_dsa.pub** file from the **backup.com** server to the **master.com** server writing it to the file **root/.ssh/authorized_keys2** and will ask for the root password for the **master.com** server.

As a result, after typing `ssh root@master.com` you will get a **backup.com** remote terminal at the **master.com** server with root account permissions.

Note: Establishing trust relationship between computers is a serious breach in security. Use this facility judiciously. Provide trust relationship only for the systems where it is absolutely necessary.

APPENDIX 1: WHAT'S IN A TWO-LEVEL CLUSTER PACKAGE

mvts-2.1.8-Linux.tar.gz – signaling MVTS

mmvts-Linux.tar.gz – media MVTS

MIME-Lite-2.117.tar.gz – MIME Lite rpms (required for the **mera_backup_watchdog.plx** script)

synchro.tgz – configuration synchronization script for the primary and failover system.

APPENDIX 2: MISCELLANEOUS OPERATIONAL ISSUES

SMOOTH TRANSITION FROM SINGLE-SERVER TO CLUSTER SOLUTION

To ensure a smooth single-server-to-cluster transition with the minimum downtime of the system it is advisable to proceed as follows:

1. Deploy and configure your new cluster facility
2. Add the cluster MVTS as a gateway and dialpeer in your single-server configuration
3. Make a routing rule to divert part of the traffic to the cluster facility and see how your new installation operates
4. When positive that the cluster deployment is ready to fully take over remove the single-server facility from service by deactivating the networking IP address on the single-server MVTS and getting it up on the cluster MVTS

   For that purpose get down the networking IP on the old MVTS server by typing at the command prompt:

   ```
   >#ifconfig eth0 down
   ```

   get up the IP address on the cluster MVTS server by typing at the command prompt:

   ```
   >#ifconfig eth0 inet xxx.xxx.xxx.xxx netmask yyy.yyy.yyy.yyy
   >#ifconfig eth0 up
   ```

Note: *Do not forget to make appropriate IP address changes in the scripts that ensure interoperation of the primary and standby servers in the failover scheme*

HOW THE SIP-HIT TRANSCODER FITS IN THE CLUSTER MVTS

The SIP-HIT converter is deployed on the media MVTS level. Load balancing between SIP-HITs is impossible in the current versions of the MVTS cluster solution (implementation pending) and the protocol converter has to be rigidly linked to the assigned terminator.

For more information on the SIP-HIT module, see [3].